


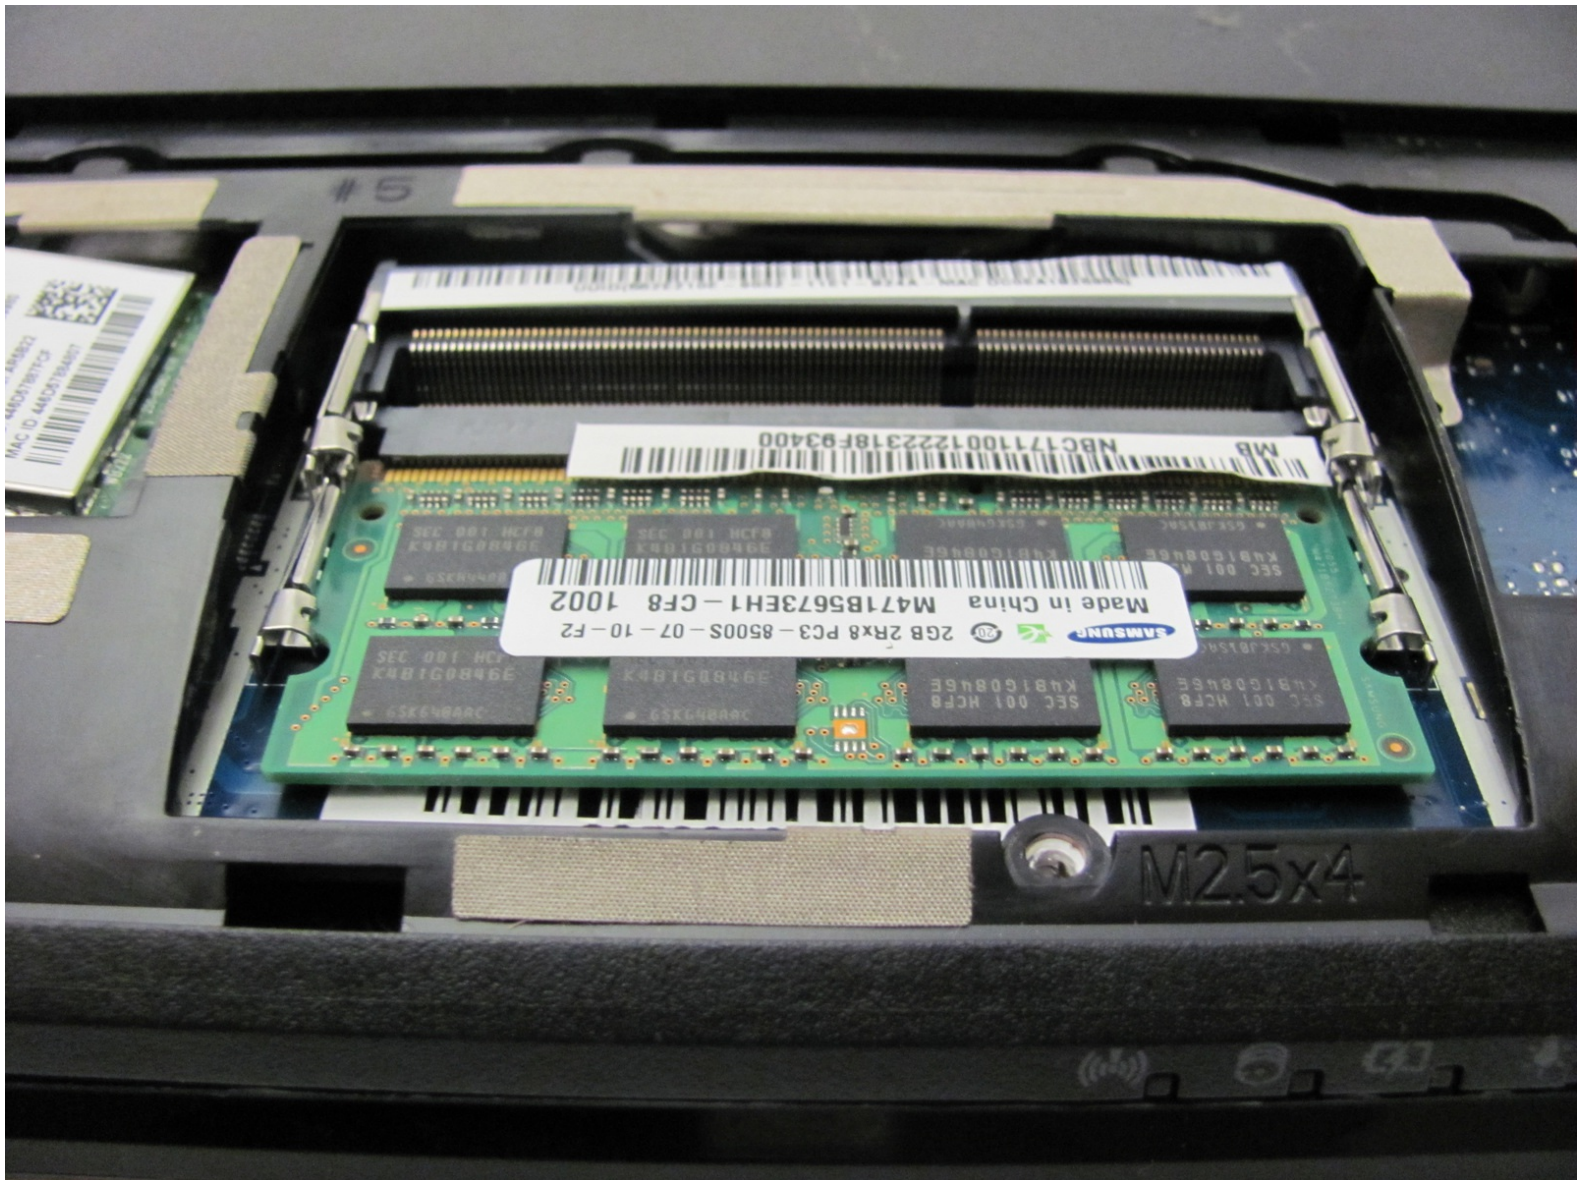

Acer Aspire V3-551-8887 RAM Replacement

Memory, or RAM, should be replaced when the computer does not boot or runs slowly.

Written By: Lance



INTRODUCTION

Need more RAM? Follow this guide to speed up your laptop.



TOOLS:



- [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Panel




- Locate and remove the two 5.3 mm Phillips #1 screws holding the back panel in place.

Step 2

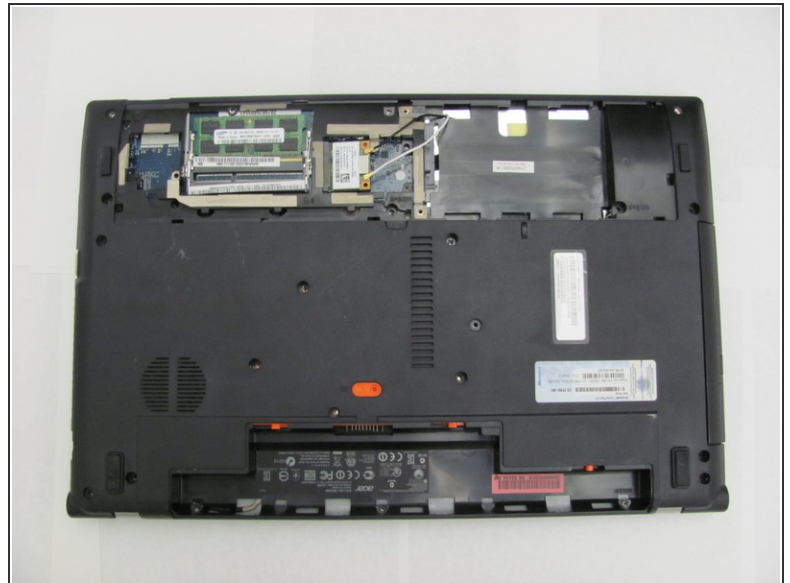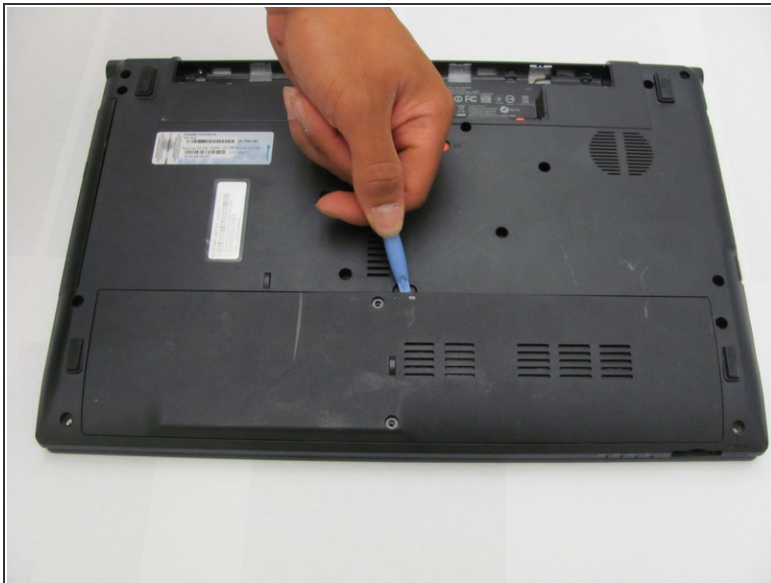


- Use a spudger to pry the panel up from the laptop case and remove it.
- The laptop should now be open with the RAM and wifi chip now accessible.

Step 3 — RAM

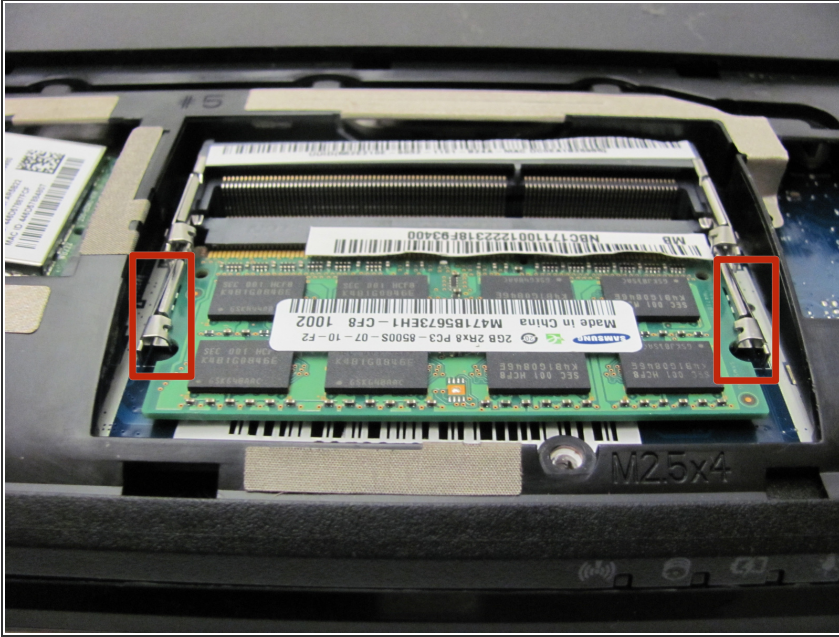


- Locate the two RAM clips.

Step 4

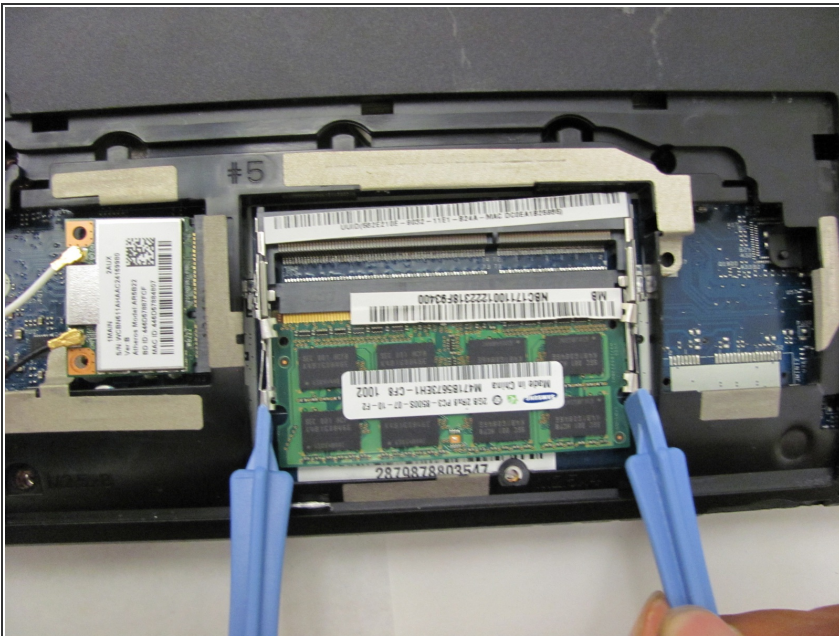

- Use two spudgers to pry the two clips outward to release the RAM chip.

Step 5

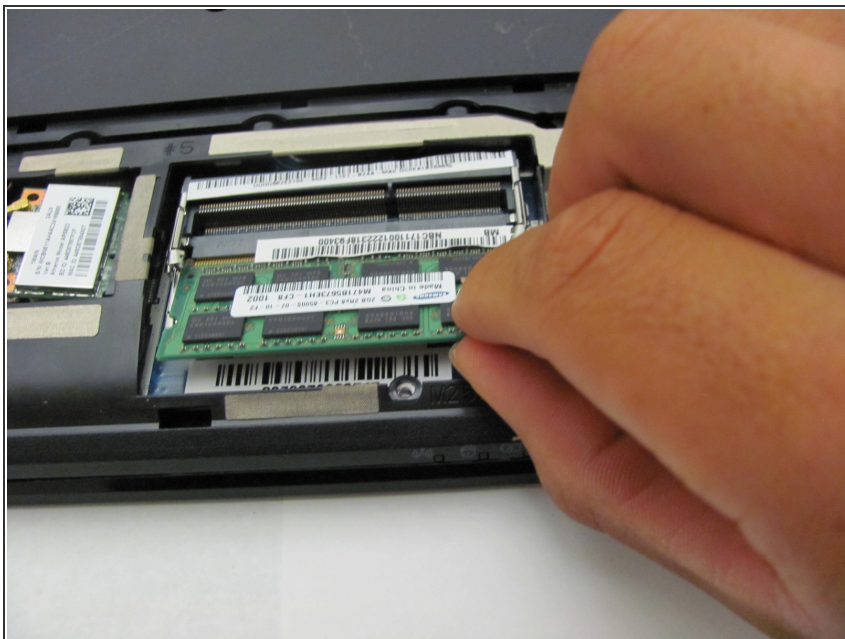

- Gently pull out the RAM chip.

❗ If your laptop is using more than one stick of RAM, remove the second by repeating the past three steps.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-05 07:41:16 AM.